


munchkin.

98° Digital Warmer

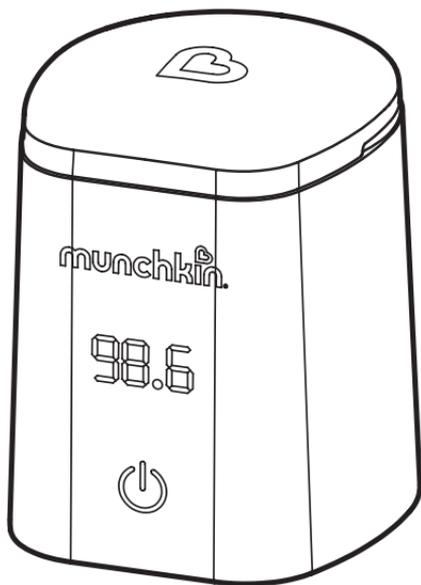

KEEP FOR FUTURE REFERENCE

Please read the instructions carefully before using this product.

Table of Contents

 IMPORTANT SAFEGUARDS	
FCC Information	3
 INCLUDED PARTS	
Included Parts.....	6
Included Adapters.....	7
 HOW TO USE	
Maintenance and Cleaning.....	8
One-Year Limited Warranty	11
Technical Specifications.....	11
 CUSTOMER SERVICE	
Contact Us	11

IMPORTANT SAFEGUARDS

 **WARNING: Strangulation hazard! Keep out of reach of children. Do not use with extension cords.**

When using electrical appliances, basic safety precautions should always be followed, including the following:

- Read all instructions carefully before using your digital warmer.
- To protect against electrical shock, do not immerse the appliance, cord or plug in water or any liquid. Clean with damp cloth only. Avoid spillage on the connector.
- For use by adults for intended purposes only. Any other use is inappropriate and dangerous. Keep out of the reach of children.
- Appliance should be placed on a flat and stable area away from hot surfaces.
- Do not let cord hang over edge of table or counter or touch a hot surface.
- Do not move appliance when in use or if it contains hot water or liquid.
- The warming chamber may become hot. Do not touch while in use and let cool before handling.
- Ensure the baby bottle contents are at a safe temperature before feeding.
- Use plastic baby bottles approved for boiling or glass thermo-resistant baby bottles with this appliance.
- Do not use this product to heat frozen baby bottles.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts and before cleaning. Allow warmer to cool before cleaning.
- Do not operate any appliance with a damaged cord or plug after the appliance malfunctions or has been damaged in any manner. Return appliance to Munchkin, Inc. for examination, repair, or adjustment.
- The use of accessory attachments is not recommended by the appliance manufacturer and may cause injuries.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off" then remove plug from wall outlet.
- To disconnect, always make sure unit is "off" before removing plug from wall outlet.
- Do not use appliance for other than intended use.
- Before serving the contents, unplug cord from wall outlet. Do not leave cord within child's reach.
- Close supervision is necessary when any appliance is used by or near children.
- Extreme caution must be used when moving an appliance containing hot liquids.

⚠ Important Safeguards

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
- A short power-supply cord (or detachable power-supply cord) should be used to reduce the risk resulting from becoming entangled in or tripping over a longer cord. Longer detachable power-supply cords or extension cords are available and may be used if care is exercised in their use. If a longer detachable power-supply cord or extension cord is used:
 - a. The marked electrical rating of the cord set or extension cord should be at least as great as the electrical rating of the appliance.
 - b. The cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over unintentionally.
 - c. If the appliance is of the grounded type, the cord set or extension cord should be grounding- type 3-wire cord.
- To be used with baby bottles only. May cause serious injury if used with any other vessel.
- The heating element surface is subject to residual heat after use.
- For household use only. Do not use outdoors.
- Do not touch hot surface.

SAVE THESE INSTRUCTIONS

NOTE: These instructions are to be used as a guide only. Please note that there are many variables, such as size of the baby bottle, ambient temperature, and starting temperature of the liquid, which can impact the speed as well as the final temperature at which this unit warms the liquid. Adjustments to the instructions below may be necessary. Always test temperature of the liquid with a thermometer before feeding baby. The food should not be heated for an extended amount of time.

FCC WARNING


The device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

 **WARNING:** Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to connect the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

INCLUDED PARTS

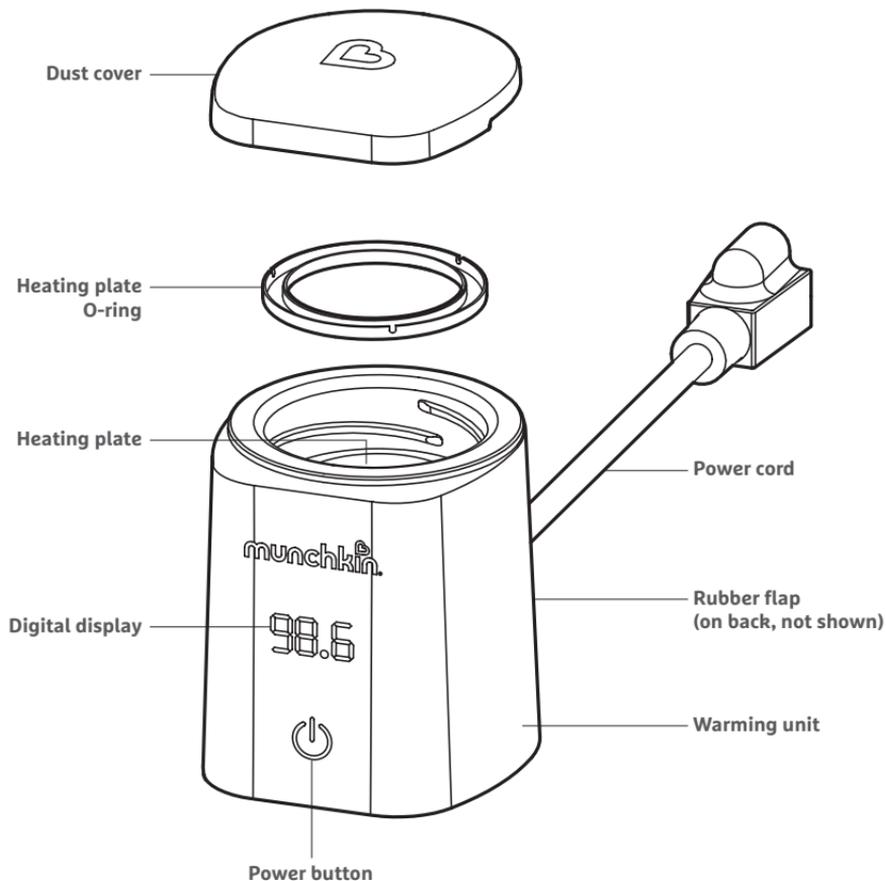

INCLUDED ADAPTERS



Adapter A (with O-ring) for:

- Dr. Brown's 4oz and 8oz*
- Medela 5oz and 8oz*
- Nuk First Essentials 5oz and 9oz*
- EvenFlo Feeding Classic 4oz and 8oz*
- Parents Choice 5oz and 9oz*



Adapter B (with O-ring) for:

- Tommee Tippee 5oz and 9oz*



Adapter C (with O-ring) for:

- Nuk Simply Natural 5oz and 9oz*



Adapter D (with O-ring) for:

- Munchkin Latch 4oz and 8oz*

No adapter necessary for:

- Avent Natural 4oz and 9oz*
- Evenflo Balance 4oz and 9oz*

 **WARNING:** Do not use glass baby bottle without an adapter.

HOW TO USE

1. Choose the correct adapter for your baby bottle (see Included Adapters on page 7).


Ensure the O-rings are installed in the warming unit and adapter (flat side down).

Screw the adapter into the neck of the warming unit. If no adapter is needed, screw bottle directly into the warming unit.


2. Fill the baby bottle with water (for formula) or breast milk.

NOTE: For faster results, heat water before mixing formula.

3. Flip the warming unit upside down and screw the baby bottle into the unit or adapter. Twist until the baby bottle is pressed firmly against the O-ring to ensure a watertight seal.

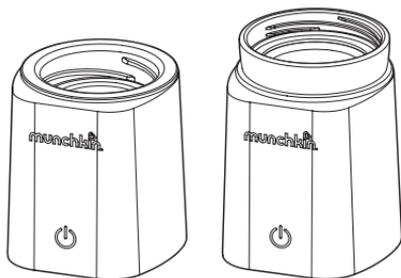

- Open the rubber flap on the back of the warming unit, then insert the power cord. Plug the cord into an electrical outlet.
- Turn the warming unit right side up, then press the power button for two seconds to start warming. The digital display will turn on.

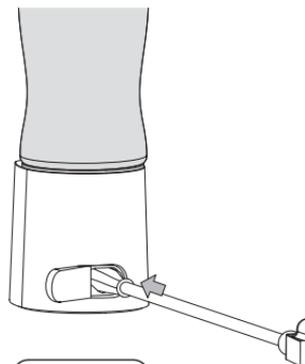



VOLUME	STARTING MILK TEMPERATURE	
	68°F (20°C)	41°F (5°C)
2oz/60ml	~2 mins	~2.5 mins
4oz/120ml	~4 mins	~5.5 mins
6oz/180ml	~5 mins	~7 mins
8oz/240ml	~6.5 mins	~9 mins

NOTE: Based on most common standard size 8oz bottle.

- When the liquid reaches 98.6°F, the warming unit will beep to indicate the cycle is complete. The liquid will be kept at this temperature for up to 30 minutes after the cycle is complete. After the 30 minutes the warming unit will auto shut off.

NOTE: To ensure your liquid is warmed properly, wait until the end of the cycle before removing the bottle.

- Flip the warming unit upside down and unscrew the baby bottle. Always check the liquid's temperature before feeding. Press the power button for two seconds to turn off the warming unit.

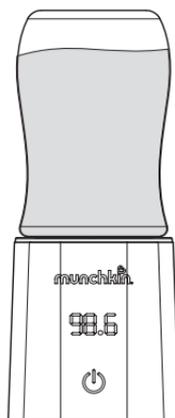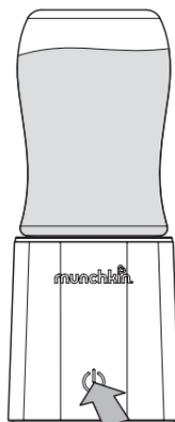


HOW TO CLEAN

Always unplug unit and ensure that it is cool before cleaning. Do not use scouring pads, abrasives or solvents for cleaning; they may damage the appliance and its surface. Place the rubber plug back into the plug attachment to prevent water intrusion and cause electrical short during cleaning.

Digital Warmer: Wipe all surfaces with a damp cloth or sponge using mild liquid soap, rinse with clear water. Allow to air-dry. Do not submerge unit in liquid.

Adapters and O-rings: Wash with mild liquid soap and rinse with clear water. Allow to air-dry. Always replace O-rings to their proper location (flat side down). Keep Dust Cover on when not in use to keep heating plate clean.

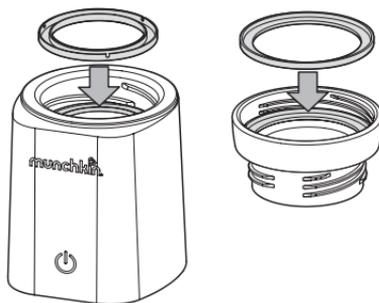

DE-SCALE

De-scale your Digital Warmer after every use to ensure residual deposits are removed from the heating plate and the silicon seal. To de-scale, mix 0.5oz. (15ml) of white vinegar with 0.5oz. (15ml) of cold water and pour into the Warming Chamber. Allow liquid to stand in the unit until any deposits (limescale) have dissolved. Discard liquid and rinse with clear water, repeat "Clean Cycle" to remove any residual deposits. **NOTE:** To avoid bacteria growth perform "Clean Cycle" and "De-Scale" daily. Any other servicing should be performed by an authorized service representative.

TROUBLESHOOTING

Blinking display: Digital warmer will not operate if tilted more than 30°. Place warmer on a flat surface.

Display "E1": Digital warmer is not responding to input command from the control panel due to damaged temperature sensor.

Display show "E2": Digital warmer is not responding to input command from the control panel due to damaged heating element.

Overheat protection: Power switch turn off after three consecutive beeps – circuit protection detects rapid increase in internal temperature to prevent damage to the device.

Three beeps: Digital warmer will power off due to limescale deposit build up on heating plate or if milk has not been mixed thoroughly.

ONE-YEAR LIMITED WARRANTY

Munchkin's 98° Digital Warmer includes a 1-year limited warranty against defects from the date of purchase. In the event of a malfunction or defect during the in-warranty period, Munchkin, Inc. at its option, will replace or repair the product under warranty. Upon receipt of the product and proof of purchase with a valid date of purchase, the defective part will be immediately repaired or replaced and returned to you free of charge (USA only). Please send defective unit, proof of purchase and a description of the problem you have encountered to:

Munchkin, Inc. 7835 Gloria Avenue
Van Nuys, CA 91406, USA
Attn: 98° Digital Warmer Warranty

NOTE: This warranty does not cover misuse, abuse, abnormal wear & tear, negligence, environmental exposure, alteration or accident. Any alteration or removal of the product date code invalidates all claims against the manufacture.

TECHNICAL SPECIFICATIONS

- Product name: 98° Digital Warmer
- Model: MKFE0769-01

Electrical Rating:

- Input Voltage: 120VAC, 60Hz,
- Wattage: 110W
- Warming unit dimensions: L3.3"(8.3 cm) x W3" (7.6 cm) x H3.4" (8.5 cm)
- Warming unit net weight: 0.4 lb(198g)
- Safety listings:
- CONFORMS TO UL STD. 1026

CONTACT US

If you have any questions or wish to provide comments about this product, feel free to contact our Customer Satisfaction team at **1-800-344-2229** (M-TH 8:00am-5:00pm PST, F 8:00am-1:00pm PST) or visit our website at **www.munchkin.com**.

munchkin.[®]
it's the little things.

munchkin.com
800.344.2229

